



Problem Analysis

1. When laser machine is transferred, the laser tube should be disassembled to avoid shake and damage. Especial higher power laser tube, such as 80w 100w and bigger tube.

And save the laser tube in safe package box, inside with Anti-collision material, such as thick foam as the below picture:





2. High-tension wire of laser tube laser tube.

If the high-tension wire and low-tension wire spark strongly , it also can break the internal tube of laser tube.

What will bring spark?

- 1) High-tension wire and low-tension wire connection is loosen,
- 2) High-tension wire and low-tension wire is ageing;
- 3) High-tension wire cover is not covered well.



WUHUA
MACHINERY